


notes

1. Wing tip outline is 1/16 by 1/8. Center panel is 1/8 by 1/8.
2. Dihedral jig is 1.5 in. wide (high)
3. Wrinkle paper, no paint. cover top of center and bottom of wing tips.
4. Wing saddle is 1/8 by 1/4
5. Motor stick is 1/8 X 1/4 by 12 long.
- 6 Use 6" Peck Prop

dihedral jig

Motor 1 loop of 1/8 tan or super sport rubber... little slack if you want a reasonable glide.

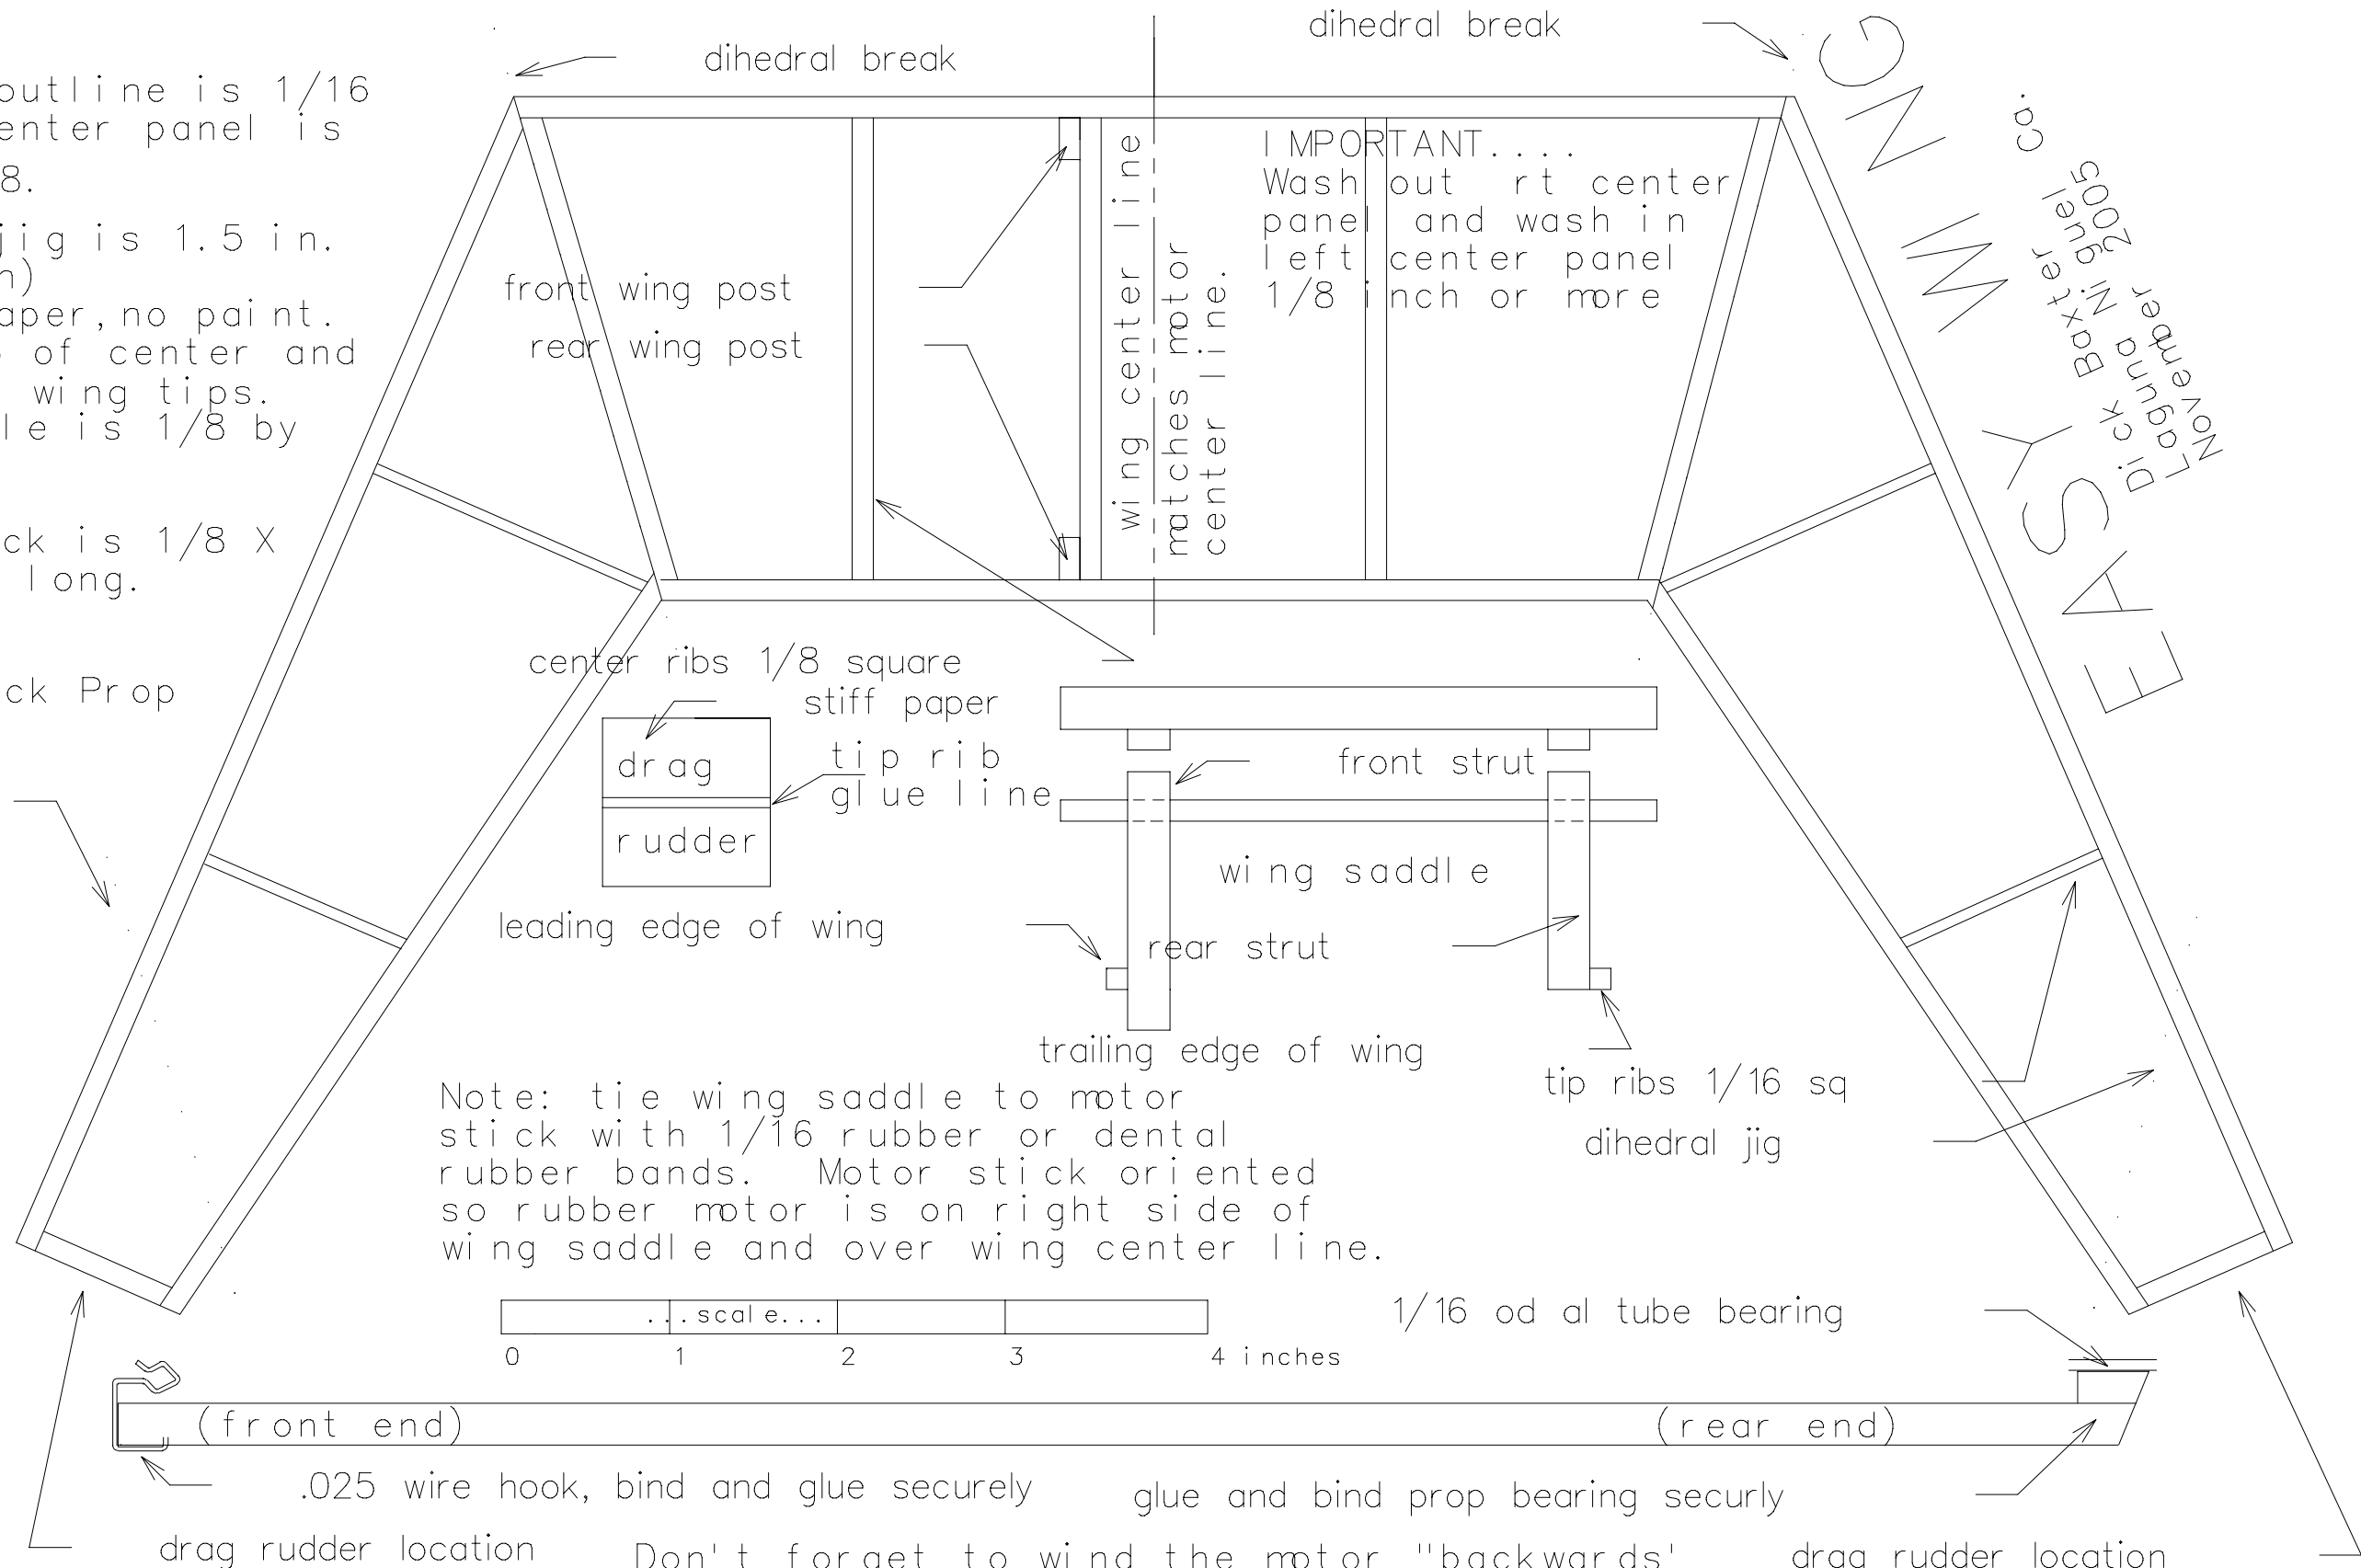

November 2005
 Dick Baxter
 YAESI
 W3MMG
 Co.

USE OF DRAG RUDDERS

start with both rudders fully retracted (folded flat)... deploy drag rudder on the tip on the INSIDE of the desired turn, by folding the paper perpendicular to the wing surface.